

# MACHEREY-NAGEL

## Rapid Tests for Metal Workshops

Dip & Read Tests



Fast and reliable

- Quick cooling lubricant control
- Easy to use
- Accurate results



**MACHEREY-NAGEL**

[www.mn-net.com](http://www.mn-net.com)



Distribútor pre SR:

AZ CHROM s.r.o., Robotnícka 10, 831 03 Bratislava Tel. 0907 244526  
[azetchrom@hplc.sk](mailto:azetchrom@hplc.sk), [www.azetchrom.sk](http://www.azetchrom.sk)






# Dip & Read Tests for Metal Workshops

## Simplest handling – exact results

When metal parts are machined (drilling, cutting ...) cooling lubricants or coolants are indispensable to guarantee the quality of the work piece as well as the lifetime of machines. The Dip & Read tests in this special selection provide valuable information to keep the coolant and the machine in good condition. All tests can easily be performed by chemically untrained persons.




## Product information

Test	Product	Application	Gradation	REF
	pH-Fix 6-10	<ul style="list-style-type: none"> <li>pH value is important for corrosion protection</li> <li>Quick and easy pH determination in coolants</li> <li>Optimal gradation for coolants</li> </ul>	pH 6.0 · 6.4 · 6.7 · 7.0 · 7.3 · 7.6 · 7.9 · 8.2 · 8.4 · 8.6 · 8.8 · 9.1 · 9.5 · 10	92122
	QUANTOFIX® Nitrite	<ul style="list-style-type: none"> <li>Nitrite indicates bacterial growth</li> <li>Nitrite may cause build-up of carcinogenic compounds (nitrosamines)</li> <li>At least weekly determination is recommended</li> </ul>	0 · 1 · 5 · 10 · 20 · 40 · 80 mg/L NO <sub>2</sub> <sup>-</sup>	91311
	QUANTOFIX® Lubricheck	<ul style="list-style-type: none"> <li>Tests concentration of coolants</li> <li>Units are commonly used buffer capacity (mmol/l KOH)</li> <li>Provides immediate results</li> </ul>	0 · 15 · 50 · 75 · 130 · 200 mmol/L KOH	91336
	AQUADUR® 5-25	<ul style="list-style-type: none"> <li>Tests water hardness in feed water</li> <li>Water hardness important for foaming and coolant quality</li> </ul>	< 3 · > 5 · > 10 · > 15 · > 20 · > 25 °d < 50 · > 90 · > 180 · > 270 · > 360 · > 450 mg/L CaCO <sub>3</sub>	91201
	QUANTOFIX® Nitrite/pH	<ul style="list-style-type: none"> <li>Combines pH and nitrite on a single strip</li> <li>Easy stock-keeping</li> <li>Best value</li> </ul>	0 · 1 · 5 · 10 · 20 · 40 · 80 mg/L NO <sub>2</sub> <sup>-</sup> pH 6.0 · 6.4 · 6.7 · 7.0 · 7.3 · 7.6 · 7.9 · 8.2 · 8.4 · 8.6 · 8.8 · 9.0 · 9.3 · 9.6	91338

## OEM manufacturing

First-class products in customer's own design

„Private label“ products are appreciated by our partners because they raise awareness of their company and make it very easy to realize their own brand. The high quality of our products connects with your brand name and provides a high image gain.

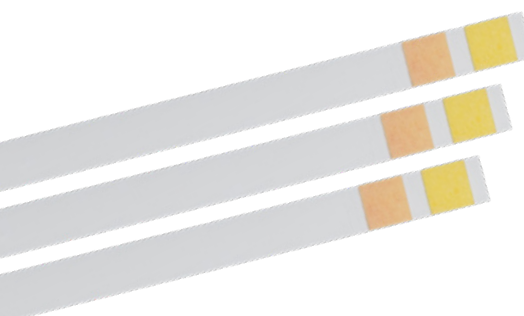

[www.mn-net.com](http://www.mn-net.com)

**MACHEREY-NAGEL**



Distribútor pre SR:  
**AZ CHROM s.r.o., Robotnícka 10, 831 03 Bratislava Tel. 0907 244526**  
[azetchrom@hplc.sk](mailto:azetchrom@hplc.sk), [www.azetchrom.sk](http://www.azetchrom.sk)